



MRC

Building Success

Please inspect the unit and immediately report any and all damages on the freight bill BEFORE accepting the delivery "in good condition". Report any and all damages missed during the initial inspection to the freight company within 24 hours. Please refer to the Preliminary Checklist manual before attempting to operate the unit


Congratulations on your purchase of the MRC Pro Series skimmer. The Pro Series protein skimmer is a recirculating skimmer. A feed pump is required for operation. It is best suited outside of a sump for highly efficient skimming.

DO NOT submerge pump as it is an EXTERNAL pump.

Setting the Pro Series Washdown Timer


- Plug in the unit to check functionality. If the screen does not illuminate, check your power source; if power is available, contact customer support.
- The washdown controller has been pre-programmed to run every 12 hours for 3 seconds. The countdown will begin immediately when the unit is powered on.

Front panel identification

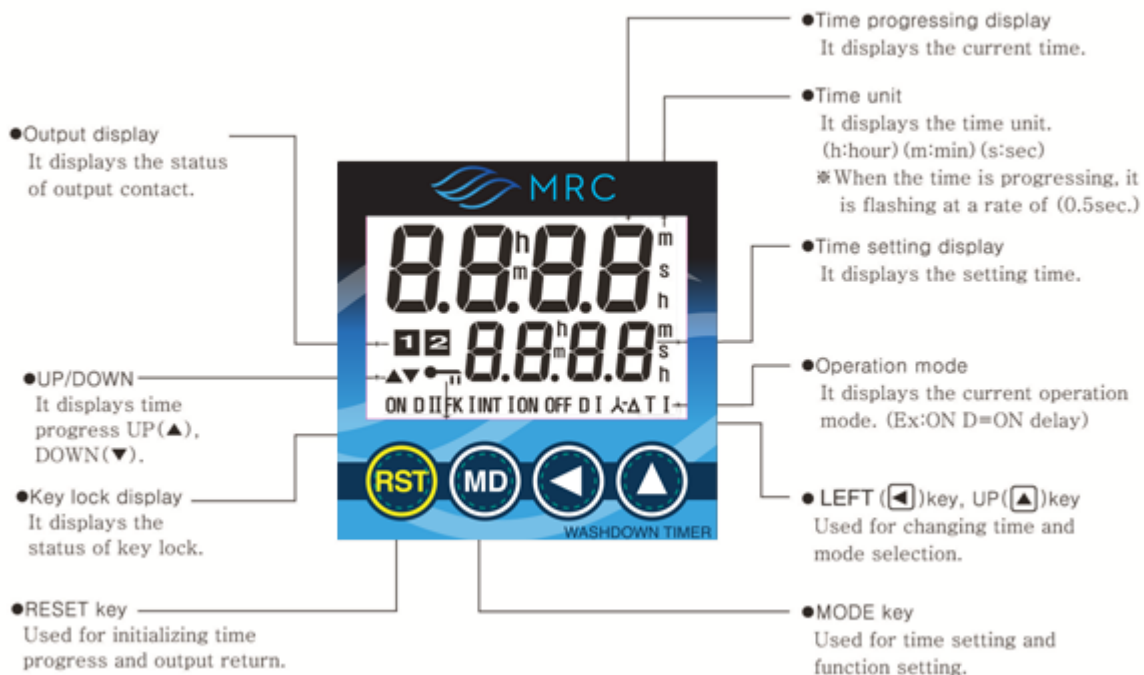

☞ The control panel has 4 buttons for operation:

- RESET key (RST)
- MODE key (MD)
 - Used as an “enter” key to accept changes
- LEFT key
 - Moves cursor left and used to enter the setup mode
- UP key
 - Used to increase numerical values. Each space will go up to 9, then back to 0

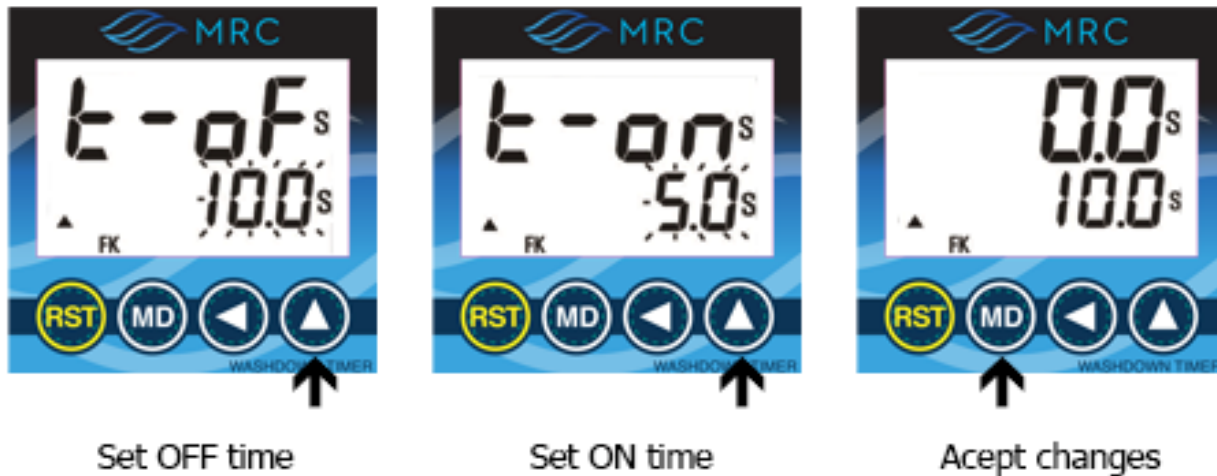

☞ Press “◀” to enter the setup menu and change the washdown intervals and duration:

- The screen will show “t-off”
 - This is the time period between each washdown (frequency), or the amount of time you want the washdown to be OFF. Using the Up and Left arrows, change the OFF time and press MD to save the changes. Note this time is set in hours.
- The screen will now show “t-on”
 - This is the duration of the washdown, or the amount of time you want the washdown to be ON. Using the Up and Left arrows, change the ON time and press MD to save the changes. Note this time is set in seconds.
- The washdown computer has now been set to your settings and the time will automatically begin the countdown.

☞ The Control Panel is flash based: your new settings should be retained within milliseconds of pressing enter. To test, unplug & re-plug power to the unit. Your settings will be retained even after power interruption. If the settings were not retained, try the above steps again, making sure you press MD to save. If the settings still do not save, please contact us for assistance.

☞ You must press MD after each change to save the settings.

For further information or questions please contact us:

www.mrcamerica.com

sales@mrcamerica.com